




Electrostatic Spray Guidance



1 Prepare the area using the standard manual cleaning protocol

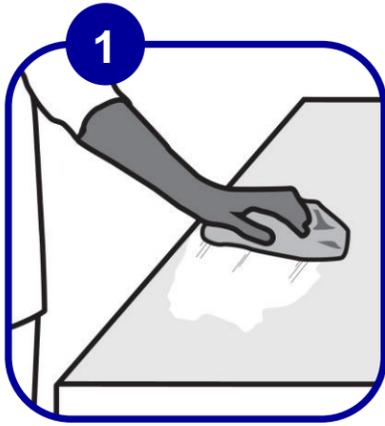

6 Close the door to the room – Post a Do Not Enter sign by the door.




2 Review the product SDS to understand proper safety precautions and PPE recommendations. If the instructions for use do not include this spray application, consult with your employer for the appropriate PPE needed.



7 Review the manufacturer instructions in the sprayer device manual and follow accordingly. Position in a rear corner of the area to be sprayed. Direct the sprayer to the desired surface area and begin to spray. Review the disinfectant label, and ensure you understand the contact time necessary for the surface to remain wet for efficacy.



3 Don the proper PPE, as listed on the product label, SDS, or in accordance with your employer's worker safety program.

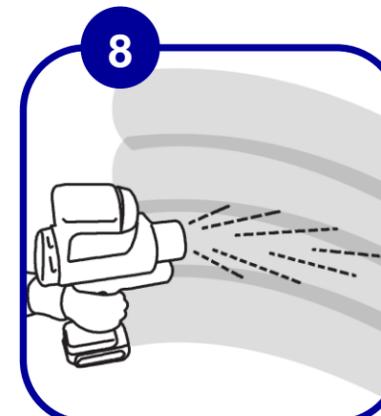


8 When applying the solution with this technology, make sure you move at an even pace to ensure the surfaces are thoroughly covered. Apply solution using a slow sweeping motion across the surfaces and allow the spray to overlap when moving to the next section. Follow a continuous path through the room at a smooth pace, moving backward toward the door, spraying away from your body and not walking into the spray.



4 Prepare the solution in the electrostatic sprayer unit per the directions for disinfection.



9 After use, follow the directions on the sprayer to ensure it is off and follow the directions to purge the system and perform any maintenance prior to storage.

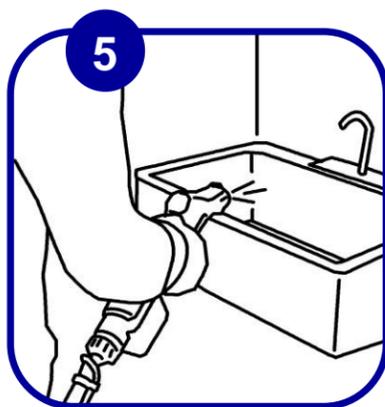

5 Follow the directions on the sprayer to prime the unit and have it ready for applying the technology.



10 Remove the Do Not Enter sign and stow the unit or prepare it for the next application.

Questions: 1-800-558-2332

Always wear appropriate personal protective equipment.